


HardwareSource Install Sheet for Gate Spring Closers

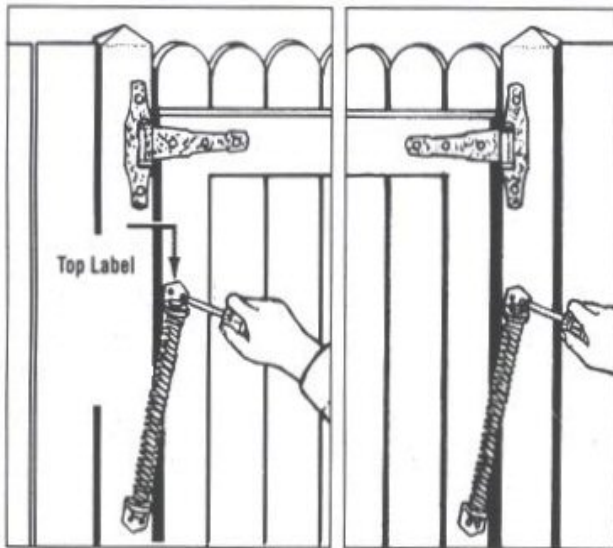

Install closer on the hinge side of the gate with the "top label" at the top as shown.



Closer springs feature adjustable torque

